


# TBW Series

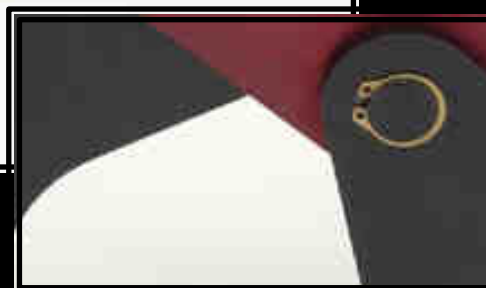

## Operating and Maintenance Instructions For TBW Series BackUP Wrenches



1025 Conroy Place, Easton PA 18040  
Phone: 610-250-5800 \* Fax: 610-250-2700  
Toll-Free: 1-888-TORCUP-1

E-mail: [sales@torcup.com](mailto:sales@torcup.com) \* Website: [www.torcup.com](http://www.torcup.com)

# Operational Instructions

1. Choose desired size Backup Wrench Cartridge. Insert the Backup Wrench Cartridge into the Backup Wrench Housing by pushing down on the Backup Cartridge Release Button and Sliding the Backup Cartridge Wrench into the Backup Wrench Housing then releasing the button.
2. Turn Adjustment Screw clockwise until screw stops. This will move the Backup arm reaction lever all the way forward.
3. Place Backup Wrench onto application. Hold the backup wrench into position making sure that the reaction point is clear, making sure fingers are away from pinch points.
4. Once you tighten or loosen the nut on the other side of the stud the Backup wrench will then abut its self up against its reaction point, locking itself onto the application.
5. To remove the Backup Wrench, once the nut on the other side of the stud is removed or tightened, you then hold the Backup Wrench while turning the adjustment screw counter clockwise to unlock Backup Wrench from application.

